


IC Realtime NVR

It takes just a few steps to connect the DoorBird IP Video Door Station to your IC Realtime NVR. Just go to Camera ->Remote menu and a list of supported ONVIF cameras in your local network will be populated. Add the DoorBird and navigate to added device -> modify. Edit the details as follows:

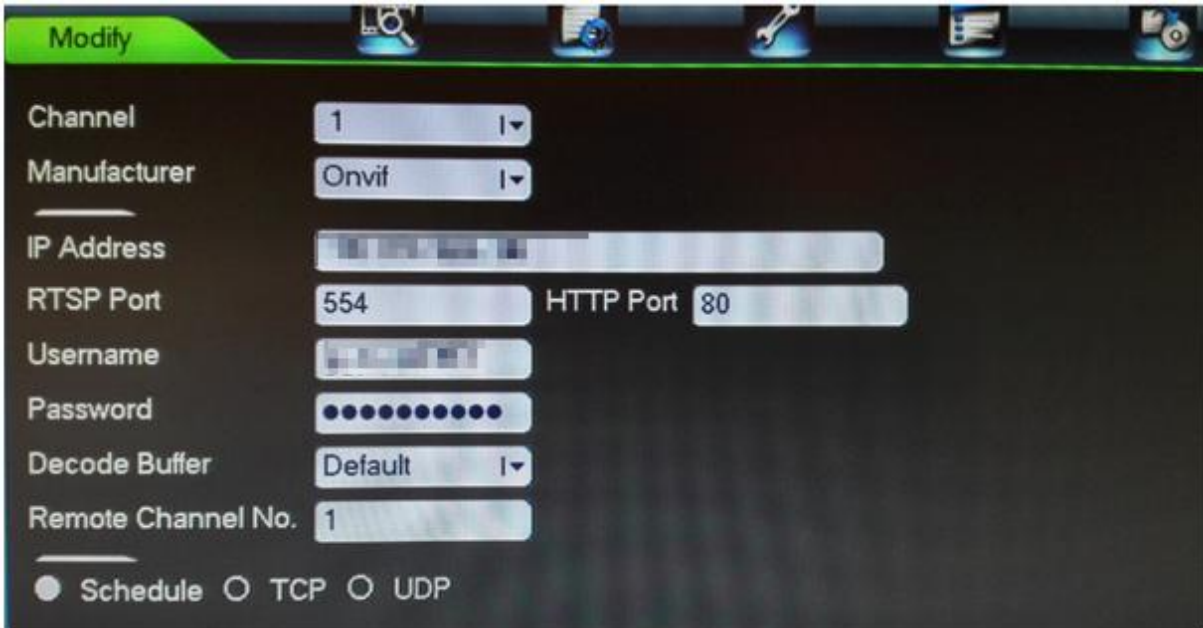

The screenshot shows the 'Modify' configuration screen for a camera in the IC Realtime NVR. The fields are as follows:

Channel	1		
Manufacturer	Onvif		
IP Address	[Redacted]		
RTSP Port	554	HTTP Port	80
Username	[Redacted]		
Password	[Redacted]		
Decode Buffer	Default		
Remote Channel No.	1		

At the bottom, there are radio buttons for Schedule, TCP, and UDP.

- Username - Enter the user name you use to add the DoorBird IP Video Door Station to the DoorBird App (e.g. xxxx0001)
- Password – Enter the password you use to add DoorBird IP Video Door Station to the app with the username from above

Leave everything else at default settings (RTSP port 554, HTTP port 80, manufacturer ONVIF, Decode Buffer Default). Double check the IP Address of your DoorBird IP Video Door Station, you can do this online from this website: <http://www.doorbird.com/checkonline>