





! Before replacing the keypad the existing cable connection has to be removed.



1 Loosen the four nuts of the keypad protective housing.

2 Remove the keypad protective housing.

3 Replace the black rubber seal.

4 Replace the transparent rubber seal.

5 Replace the keypad buttons.

i To assemble, follow these steps in reverse order.





