

I


Yealink SIP Phones with DoorBird IP Video Door Station

How to integrate **Yealink SIP-T58A** Smart Media Phone with DoorBird IP Video DoorStations.


This manual can also be used for the model YEALINK SIP-T48S Ultra-elegant Gigabit IP Phone, but only the direct peer to peer audio connection is transmitted here. A video signal is currently not supported by the SIP-T48S model!

- 1) Login to Yealink by entering the IP address of the Yealink phone in your browser.

Default Username/Password: *admin/admin*

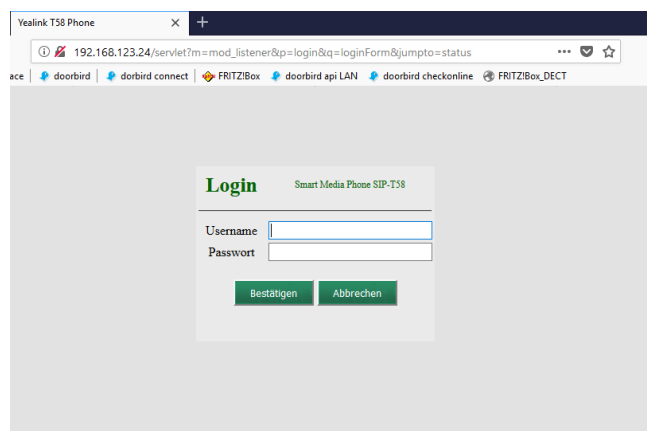


Create a new profile on your Yealink IP phone by going into administration settings of the Yealink phone. As server host enter the IP of your SIP Server, here e.g. 192.168.123.137

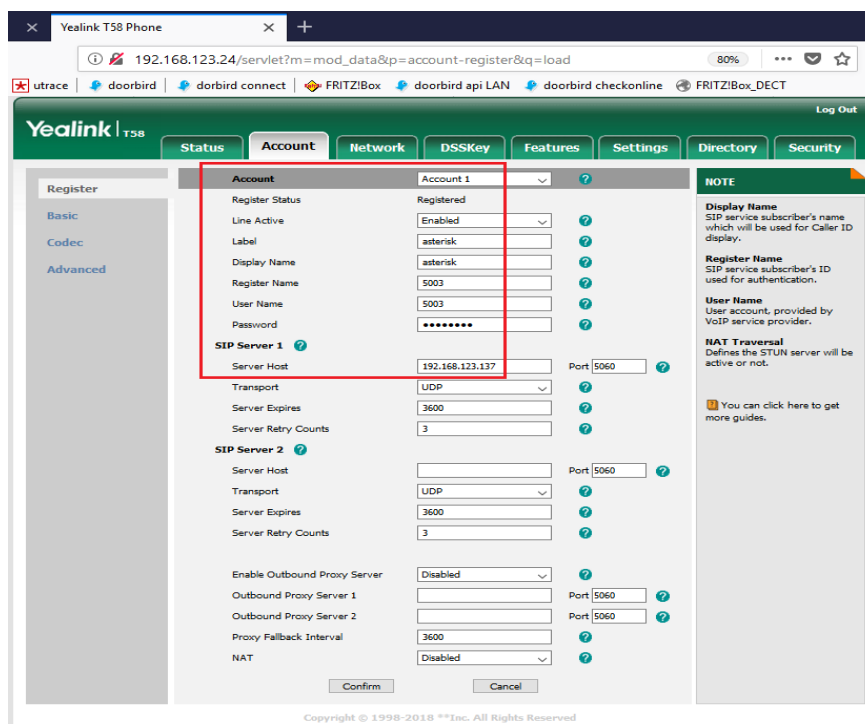


The values entered here (SIP) must be entered later in the Doorbird App. This step is explained below.

Now that you have entered your SIP data of your SIP server at Yealink, please switch to the "Codec" area on the left and check whether the corresponding codec is entered here.

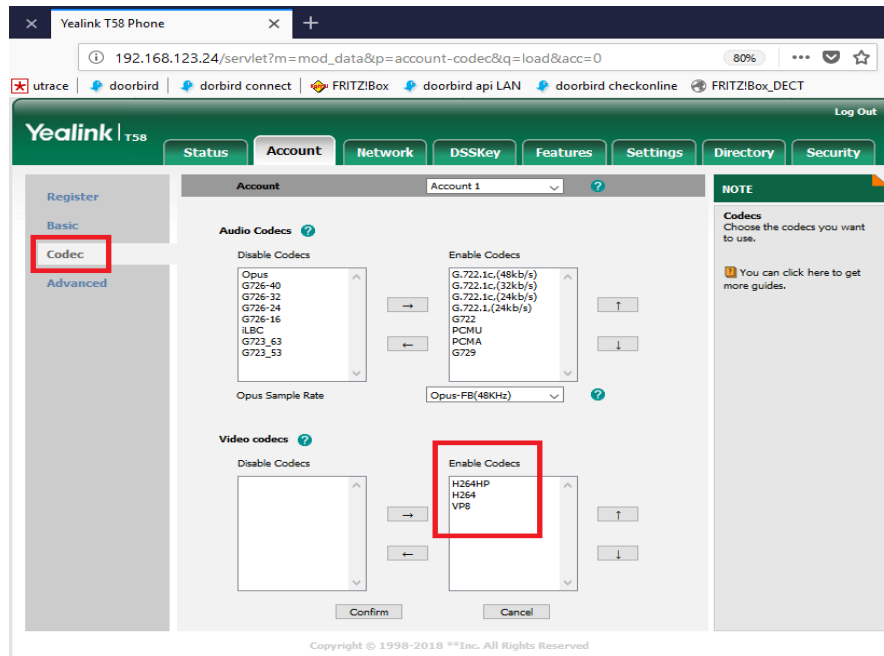


Now that you have entered your SIP data, the registered SIP server should appear on the display if your SIP server has been successfully registered.

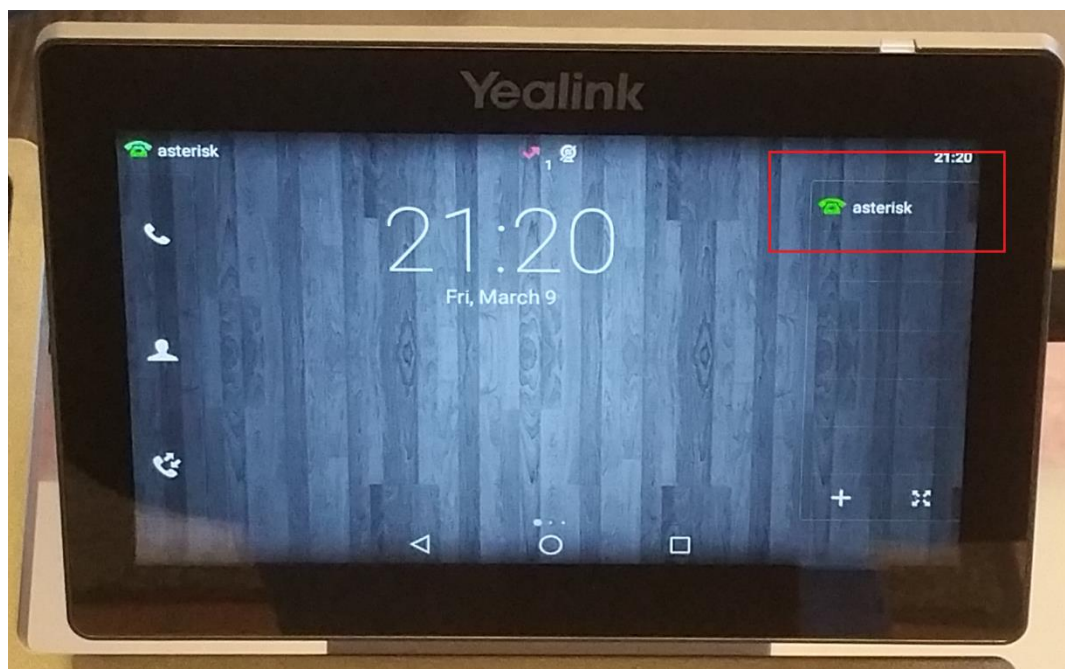



2) The next step is the configuration of the DoorBird. The SIP data of your SIP server must be entered in the Doorbird app.

Open your Doorbird app and go to the administration area. Please scroll down to "SIP Settings" and enter your data as follows:

- Sip Proxy:** The IP or hostname of your SIP server.
- Sip User:** The User ID you have assigned to your Doorbird on your SIP server.
- SIP Password:** Enter your SIP password here.

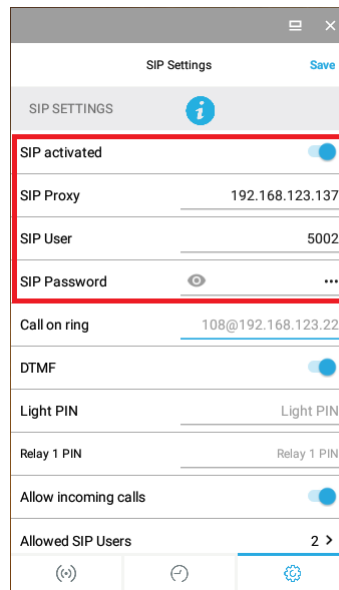

Switch to the "Allowed SIP users" area and enter the Yealink SIP user with which your Yealink phone has logged on to the SIP server. <Yealink_SIP_User>@<SIP_Server_HostName_oder_IP>

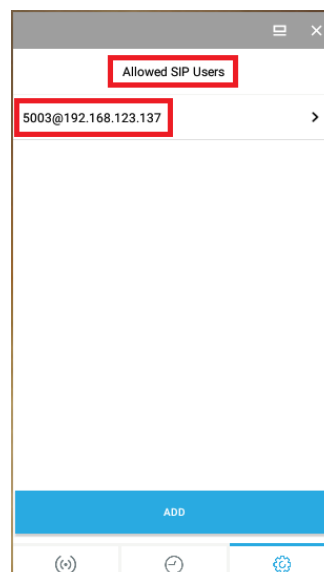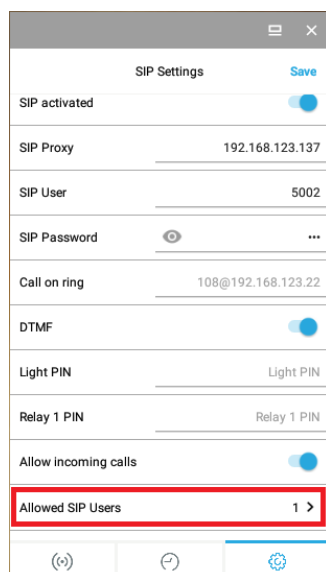



In order to receive a direct call on your Yealink phone when you ring the doorbell on Doorbird, the following settings must now be made:

- Open your App (Doorbird)
- Please log into the administration area, scroll down to "Favorites" and change to "SIP Calls". Enter the name "Yealink" for the SIP address Yealink_SIP_User>@<SIP_Server_HostName_or_IP>.
- Save your entry!
- Go back to the administration area and scroll down to the "expert settings".



3) Please enter the „Schedule for actions“ to assign a call to a ring event.

- For all devices with one ring button (e.g. D10x, D20x, D2101V, etc.), please enter the “Schedule for doorbell” in the Administration menu.
- For all devices with multiple ring buttons (e.g. D2102V, D2103V, etc.), please enter “settings” below “button configuration” in the Administration menu. Please choose the button you want to configure.
- For all devices with keypads (e.g. D21DKV, etc.), please enter “settings” below “key-pad” in the Administration menu. Please choose the keypad combination you want to configure.

Please click on the bell (🔔) icon (1) and select “SIP call” in the menu to activate the timetable for SIP (2). In case you only entered Yealink, it should already be selected. Please now fill the timetable with your desired schedule and save the settings.

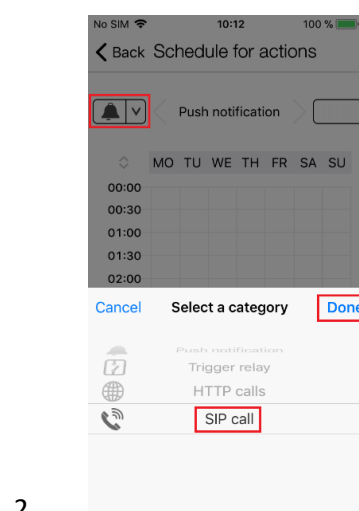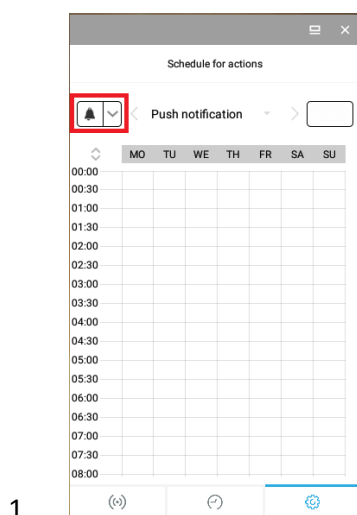

- You can select your phone in the middle (3) and activate your timetable in the right area (4).

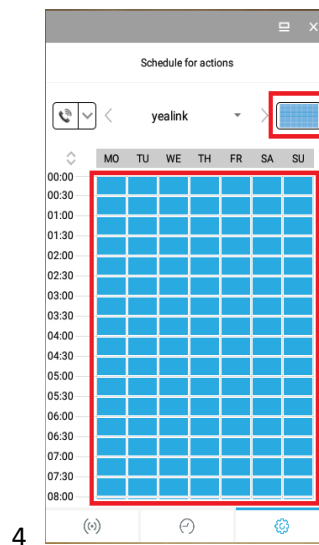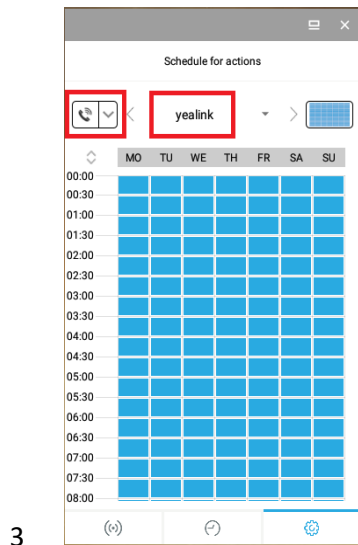

Your DoorBird is now set to ring your local Yealink phone. You can now make calls to Doorbird (SIP Call) and receive calls from Doorbird to your phone/tablet.

