

SYSTEM REQUIREMENTS

- DoorBird IP Video Door Station D10x/D11x/D21x Series.
- Linphone Account register station or without Account Registration(without SIP proxy) .

ADDITIONAL INFORMATION


The following guide will take you through setting up a DoorBird IP Video Door Station in connection with the Linphone. Please make sure that your DoorBird is online, using this service: <https://www.doorbird.com/checkonline>

The local IP address of your DoorBird is available from the same page.

- You can call from Linphone App(Andriod/Tab/PC/iPhone) to DoorBird (and vice-versa) including Audio and Video via the Linphone.org sip server.
- You can Enable the DTMF in order to trigger the relay/turn on lights during the SIP call.


1. CREATING ACCOUNT FOR DOORBIRD AND LINPHONE APP

1.1 Create an account first one for Linphone app.
<https://subscribe.linphone.org/login>

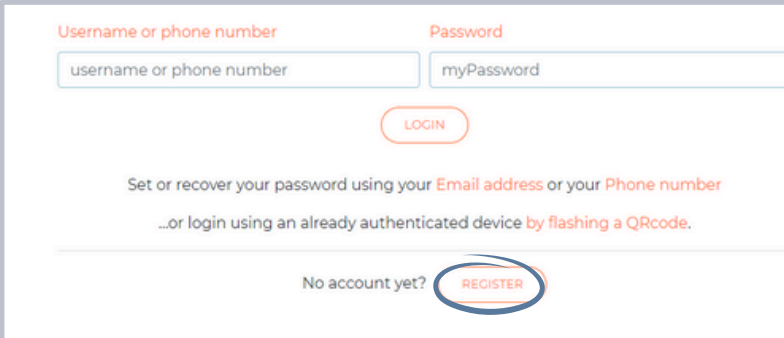

The screenshot shows the Linphone login interface. At the top, there are two input fields: 'Username or phone number' (containing 'username or phone number') and 'Password' (containing 'myPassword'). Below these fields is a 'LOGIN' button. Underneath the login section, there is a text prompt: 'Set or recover your password using your Email address or your Phone number ...or login using an already authenticated device by flashing a QRcode.' At the bottom, there is a link 'No account yet?' followed by a 'REGISTER' button, which is circled in blue.

1.2 Click on Register. Enter the name for SIP Username and Email id.

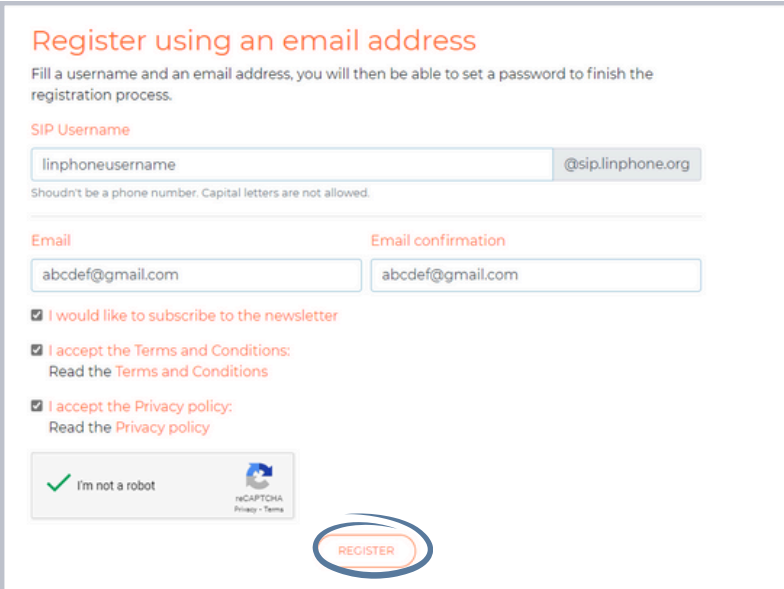


The screenshot shows the Linphone registration page titled 'Register using an email address'. It instructs the user to 'Fill a username and an email address, you will then be able to set a password to finish the registration process.' The form includes a 'SIP Username' field (containing 'linphoneusername') with a dropdown menu showing '@sip.linphone.org'. Below this is a note: 'Shoudn't be a phone number. Capital letters are not allowed.' There are two 'Email' fields, both containing 'abcdef@gmail.com'. Below the email fields are three checkboxes, all of which are checked: 'I would like to subscribe to the newsletter', 'I accept the Terms and Conditions: Read the Terms and Conditions', and 'I accept the Privacy policy: Read the Privacy policy'. At the bottom left is a 'I'm not a robot' checkbox with a green checkmark. To its right is a CAPTCHA image and a 'REGISTER' button, which is circled in blue.

1.3 Authenticate the link that has sent to your mail after registration and enter a new password to login into the account.

1.4 Please note down the SIP details for this account and it is used in the App.

1.5 Please follow steps from 1.1 to 1.3 to create other account for DoorBird with different email id/Phone number.

Note: Please use email id or phone number to register an account.

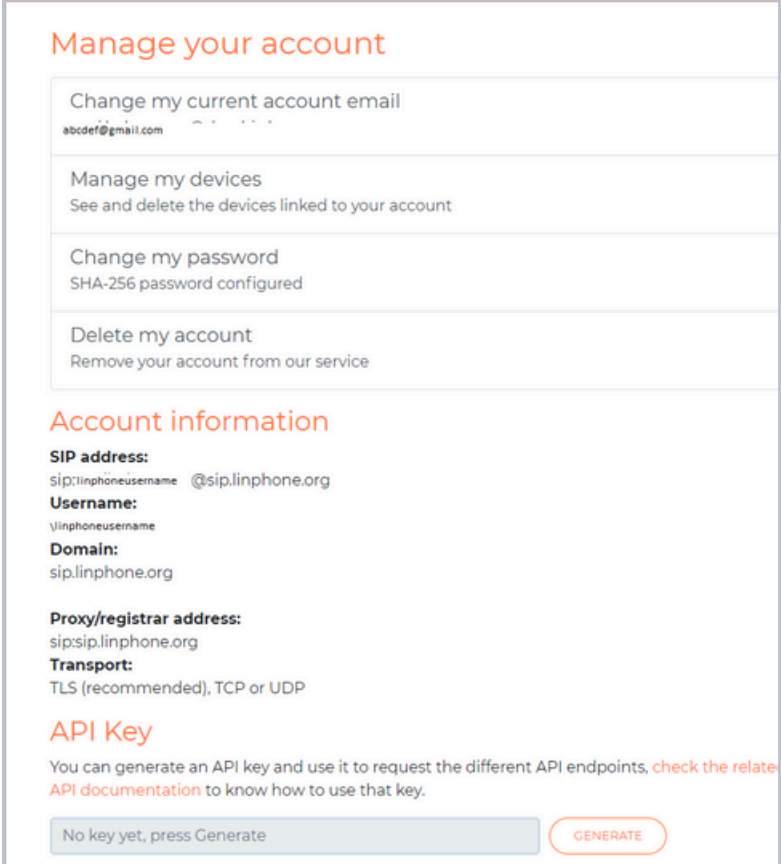

Manage your account

Change my current account email
abcdef@gmail.com

Manage my devices
See and delete the devices linked to your account

Change my password
SHA-256 password configured

Delete my account
Remove your account from our service

Account information

SIP address:
sip:linphoneusername @sip.linphone.org

Username:
linphoneusername

Domain:
sip.linphone.org

Proxy/registrars address:
sip:sip.linphone.org

Transport:
TLS (recommended), TCP or UDP

API Key
You can generate an API key and use it to request the different API endpoints, [check the related API documentation](#) to know how to use that key.


No key yet, press Generate **GENERATE**

2. SETTING UP THE LINPHONE APP USING LINPHONE ACCOUNT DETAILS

2.1 Please download and install the Linphone App on Windows/Linux/macOS/Android/iPhone.

2.2 Proceed with basic installation steps and Login into the App.

2.3 Go to assistant Click on USE SIP ACCOUNT and Click on I understand.

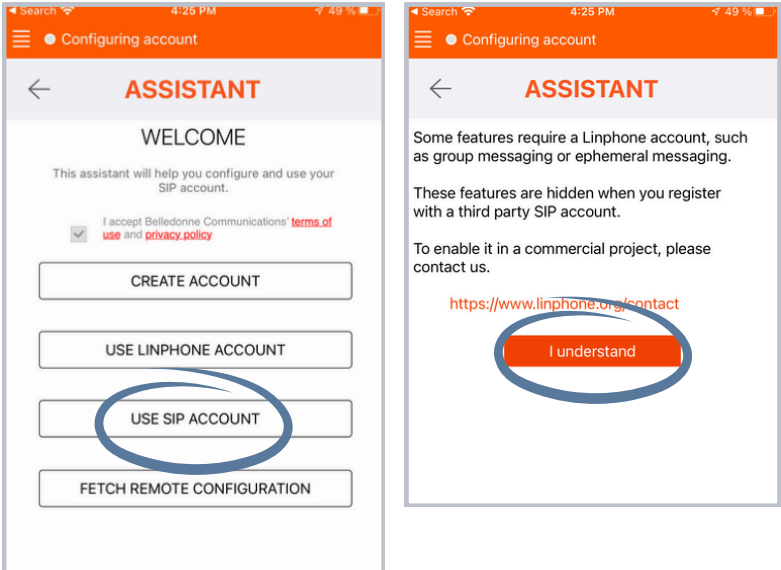

Configuring account

ASSISTANT

WELCOME

This assistant will help you configure and use your SIP account.

☒ I accept Belledonne Communications' [terms of use](#) and [privacy policy](#)

CREATE ACCOUNT

USE LINPHONE ACCOUNT

USE SIP ACCOUNT

FETCH REMOTE CONFIGURATION

Some features require a Linphone account, such as group messaging or ephemeral messaging.


These features are hidden when you register with a third party SIP account.

To enable it in a commercial project, please contact us.


<https://www.linphone.org/contact>

I understand


2.4 Enter your Username and SIP domain from the Linphone App account select UDP and login. You can see connected if entered details are correct else you can check again for inputs.

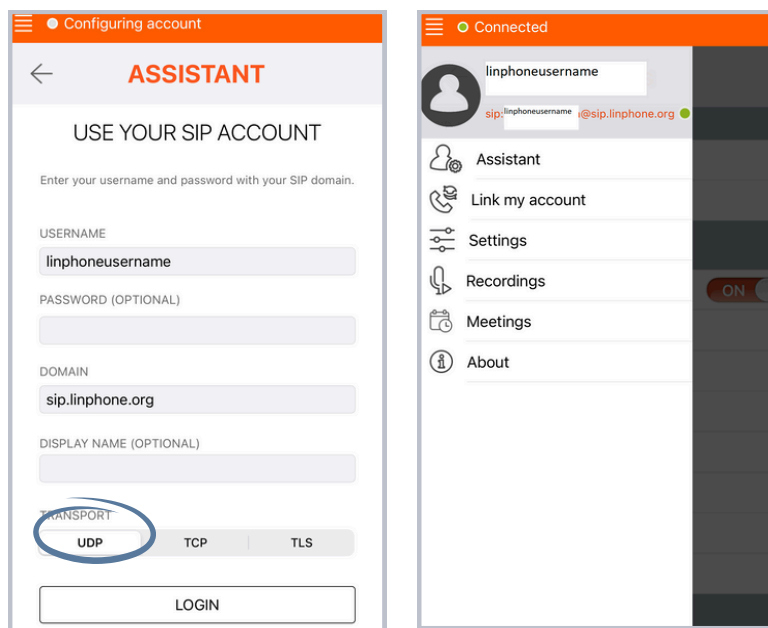

2.5 In setting enable requirements for Audio and Video.

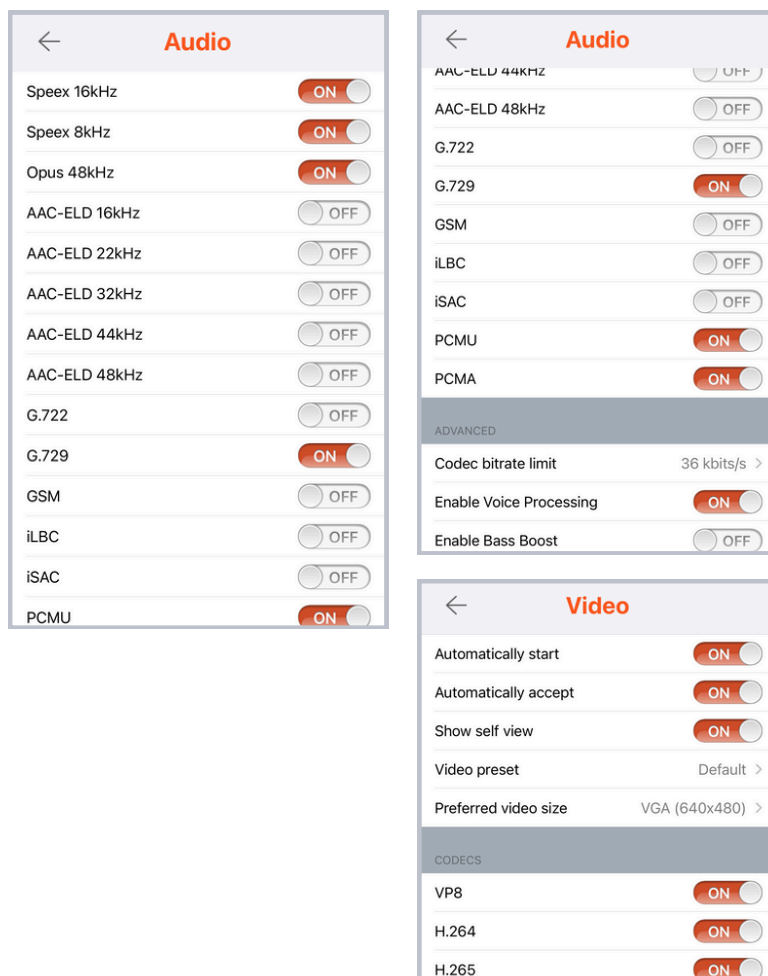


2.6 Save the DoorBird SIP address in the Contacts for the reference. Go to Contacts > Add new Contact > Enter First name , Last name and SIP address.

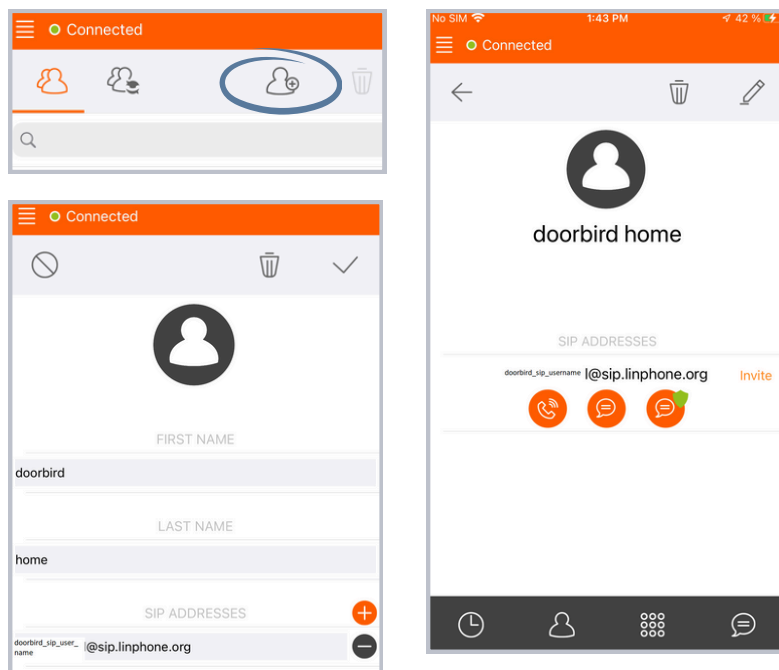


3. SETTING UP THE DOORBIRD IP VIDEO DOOR STATION

3.1 Open the DoorBird App and log into the administration area under Settings > "Administration" using the administrator username and password credentials from the "DIGITAL PASSPORT" document that was shipped with your DoorBird IP Video Door Station.

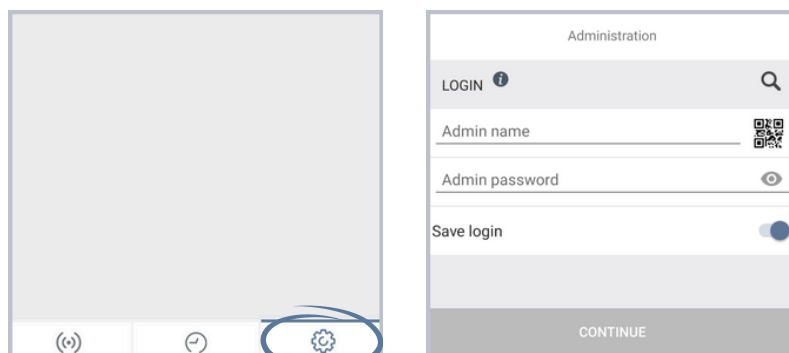

3.2 Go to User > Settings. In the User Management > User0001.

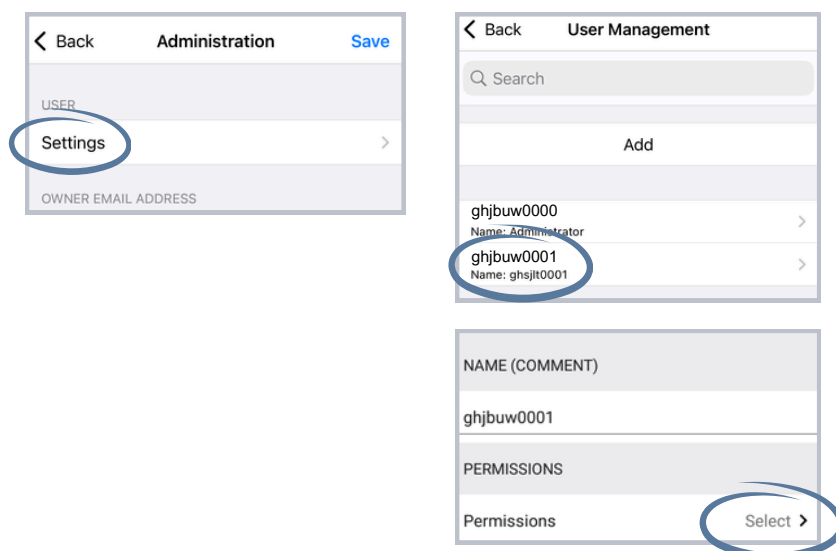

Tick all the Permissions and Relays.
Click on Save.

Hint: You can create new User (User000X) and use it for Linphone or else you can use User0001.

Administration

PERMISSIONS

- Watch always ☒
- History ☒
- Motion ☒
- Geofencing ☒
- API-Operator ☒
- ACCESS RELAYS ☒
- Relay_1 ☒
- Relay_2 ☒

Administration

Save

USERNAME

ghjbuw0001

PASSWORD

CHANGE PASSWORD

NAME (COMMENT)

ghjbuw0001

PERMISSIONS

Permissions Select >

3.3 Go back to Administration. Go to Favorites
--> SIP Numbers

3.4 Enter the sip username of Linphone app
account e.g.,
linphoneusername@sip.linphone.org.

3.5 Click on save.

Administration

Save

FAVORITES

- HTTP(S) Calls >
- SIP Numbers >
- PERIPHERALS
- Settings >

SIP Numbers

linphoneusername@sip.linphone.org

Name

linphoneusername@sip.linphone.org

SIP address

SAVE

3.6 Go to SIP settings > Enable the SIP, Enter the
SIP proxy of Linphone > sip.linphone.org,
Enter the SIP Username of DoorBird and the SIP
Password (use the same credentials entered
while creating the Linphone account for
DoorBird). Enable DTMF and the code if you
want to trigger the relay/turn on lights during
the SIP call.

SIP Settings

Save

SIP SETTINGS

SIP activated ☒

SIP Settings

Save

SIP SETTINGS

SIP activated ☒

SIP Proxy sip.linphone.org

SIP User d10doorbird

SIP Password *****

OPTIONAL SETTINGS

Auth ID

Display name

STUN Server

ADVANCED SETTINGS

DTMF ☒


Light PIN 1234

Relay 1 PIN 5678

Allow incoming calls ☒

3.7 Enable Allow Incoming calls. Click on add >
Enter the sip username of Linphone app account
e.g.,linphoneusername@sip.linphone.org.

3.8 Save the SIP settings.

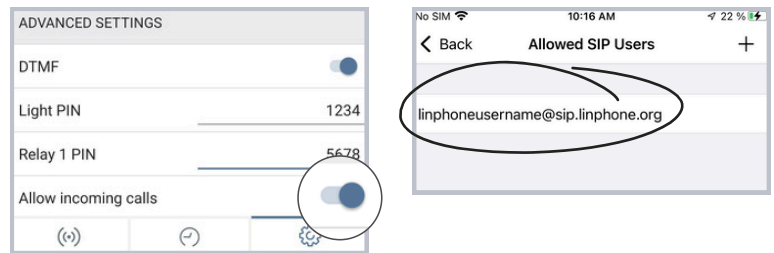

4. SCHEDULE CONFIGURATION

To forward calls from the DoorBird IP Video Door Station to the integration, a schedule for ring events needs to be set up.

Depending on the model of the DoorBird IP Video Door Station, choose one of the following options:

A) For all devices with a single call button (e.g. D1101V, D2101V, D2101KV, etc.), find the corresponding settings in the DoorBird App administration menu EXPERT SETTINGS when selecting "Schedule for doorbell".

In this screen, tap the bell symbol in the upper-left corner, select "SIP call" and fill out the schedule as per your requirements for this event.

B) For all devices with multiple call buttons (e.g. D2102V, D2103V, D2112V, etc.), find the corresponding settings in the DoorBird App administration menu BUTTON CONFIGURATION when selecting "Settings".



Select the call button the event needs to get assigned to and go to "Schedule for actions".

In this screen, tap the bell symbol in the upper-left corner, select "SIP call" and fill out the schedule per your requirements for this event.

C) For all devices outfitted with a combination digital display (e.g. D21DKV), find the corresponding settings in the DoorBird App administration menu KEYPAD when selecting "Settings".

Select the keypad combination the event needs to get assigned and go to “Schedule for actions”.




In this screen, tap the bell symbol in the upper-left corner, select “SIP call” and fill out the schedule per your requirements for this event.

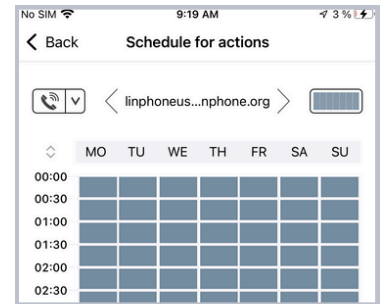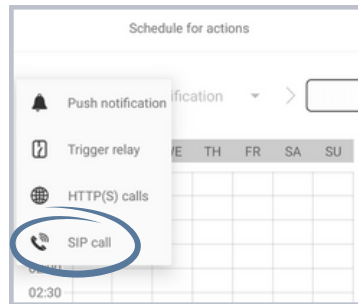

4.1 Return to the main administration area and save the settings.

Hint: By tapping the button in the upper right corner it is possible to fill or empty the entire schedule.

Call from DoorBird to Phone and From the Linphone app call to DoorBird dial the username of DoorBird e.g., d10doorbird@sip.linphone.org. Check the SIP call, if you are unable to call please re-check the settings of the Linphone app and DoorBird app.

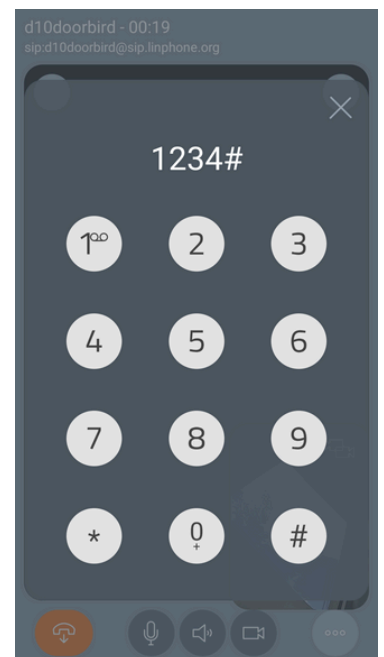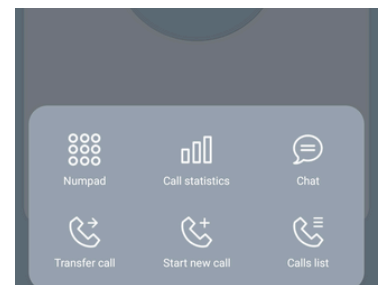
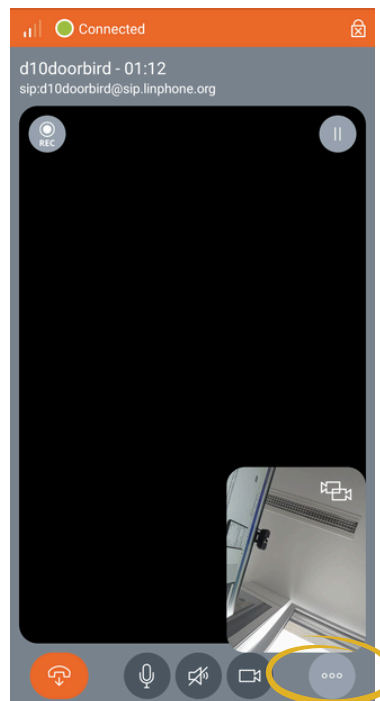


5. SETTING UP PEER TO PEER CALL WITHOUT REGISTRATION OF LINPHONE APP ACCOUNT


5.1 Download the Linphone app and Install it on Phone/Desktop.

5.2 Open the app > Accept the terms and conditions > Go to settings.

Note: No need to create an account of Linphone for calling without proxy.

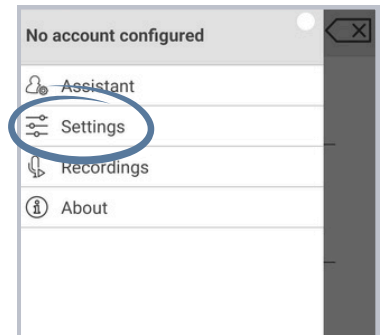
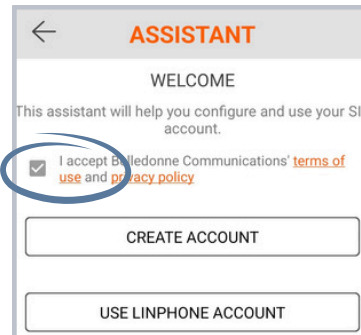


5.3 Enter the Display name e.g., samsung and Username e.g., samsung.

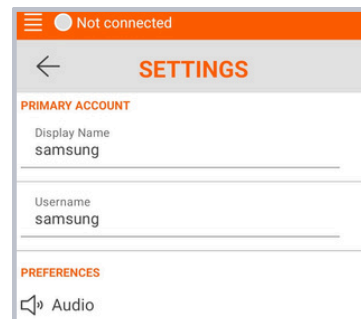


5.4 Keep the audio and video settings as mentioned in the step 2.5

5.5 Go to Call > Enable the settings as shown in the screenshot. Other general options e.g., auto recording, auto answering, etc., edit according to your requirements.

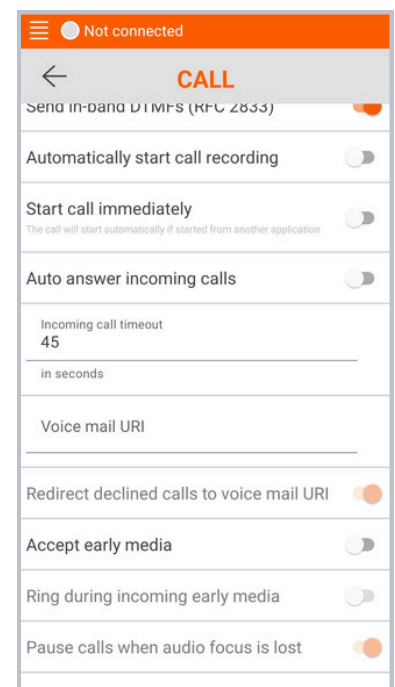
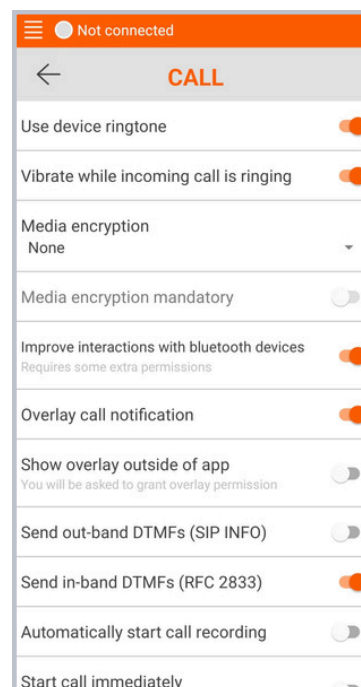


5.6 In Network > Enable the Allow IPv6 ,Disable Use random ports.
Enter SIP port to use > 5060 (Standard port for SIP communication).

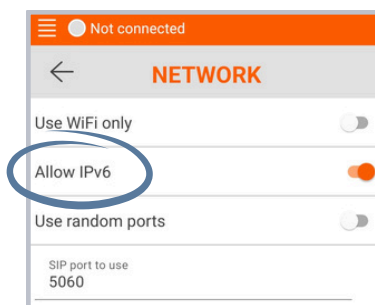



5.7 In DoorBird App, please follow steps 3.1 and 3.2.

5.8 Go to Favourites > SIP numbers > Add IP address of your phone e.g., sip:192.168.178.88.Click on Save.

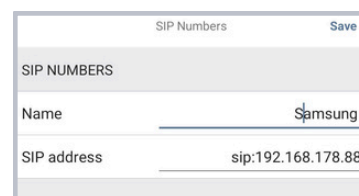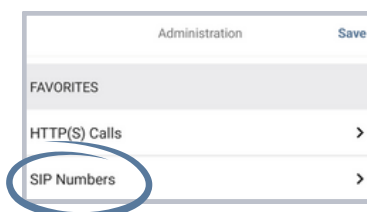



5.9 Go to SIP Settings > Enable SIP. Enable DTMF if you want trigger relay/turn on Lights during the SIP call.

There is no need to enter the SIP details since the call operates on a peer-to-peer basis.

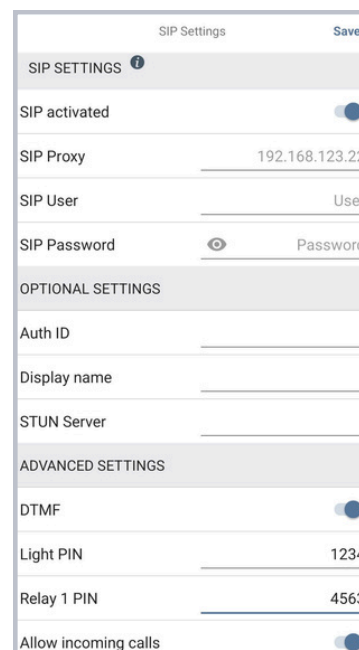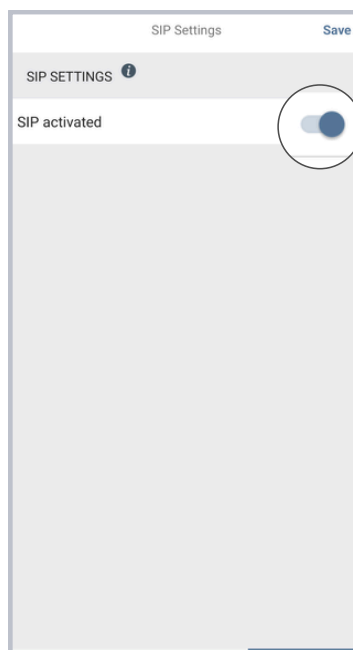



5.10 Enable Allow Incoming calls > Click on Add > Enter the IP address of the Phone.

5.11 Save the SIP Settings.


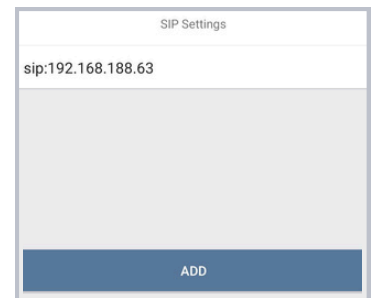
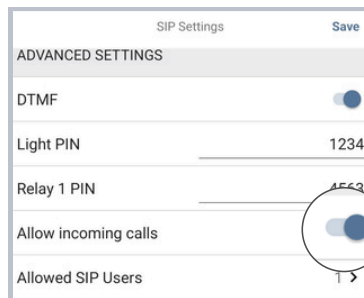


5.12 Follow Section 4 to schedule the SIP call.

5.13 Call from DoorBird to Phone and From the Linphone app call the IP address of DoorBird e.g., sip:10.4.210.88 to check the SIP call. If you are unable to call please check the IP address of the phone and DoorBird.

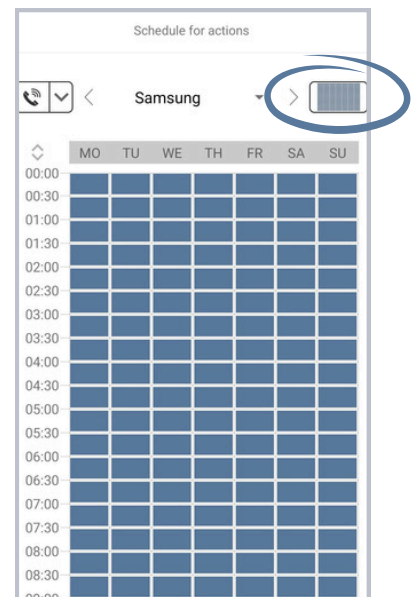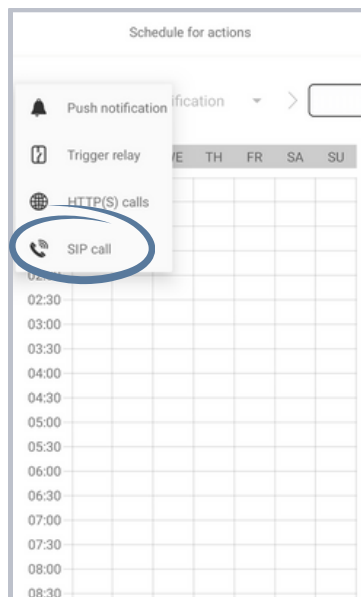

5.14 Click on more options during the call to get the keypad to enter the DTMF code e.g., 1234#

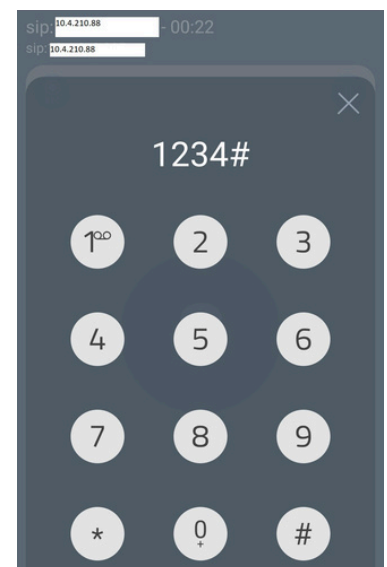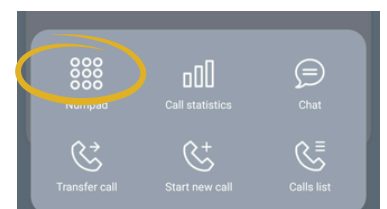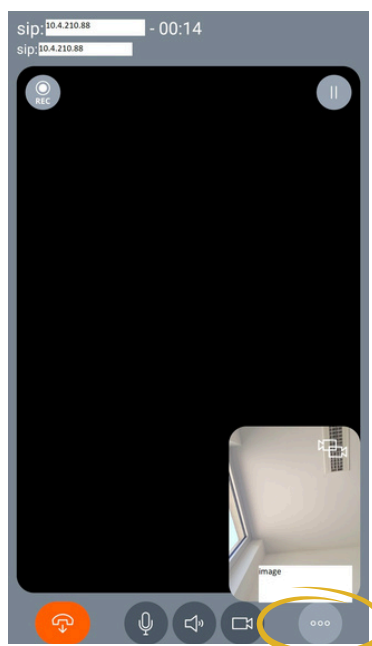

Note: For questions and problems regarding our devices (DoorBird IP Video Door Station or DoorBird IP Upgrade), please contact our technical support via the contact form online : <https://www.doorbird.com/de/contact>

FIRMWARE INFORMATION

This manual was tested using the following versions:

1. Linphone App

Linphone IOS version 5.0.2

Linphone SDK 5.2.32

2. DoorBird IP Video Door Station:

Hardware device series: D21DKH-V2A

Software Version: 000139

Hardware device series: D1102FV

Software Version: 000139

Hardware device series: D101S

Software Version: 000139